# TB159 (Rev1) - Skip First Copy in Intercon

# Overview

This document describes how to skip the first copy of a Repeat or Rotate operation in Intercon.


# **Background**

The standard Rotate, Repeat, and Mirror operations in Intercon do not have a "Skip First Copy" option in the operation itself. An example is the flange program shown below.

Standard Rotated Flange Program

Operation		End			
# Type	Х	Y	Z		
0010 ;Rotated Flange					
0020 Tool #1	0.0000	0.0000	Home		
0030 Circ Poc	0.0000	0.0000	0.1000		
0040 Drill BHC	0.8839	-0.8839	0.1000		
0050 Frame	1.2500	1.5000	0.1000		
0060 Rotate	0.4990	1.8877	0.1000		
0070 End Prog	0.4990	1.8877	Home		

This program produces a part that looks like this:

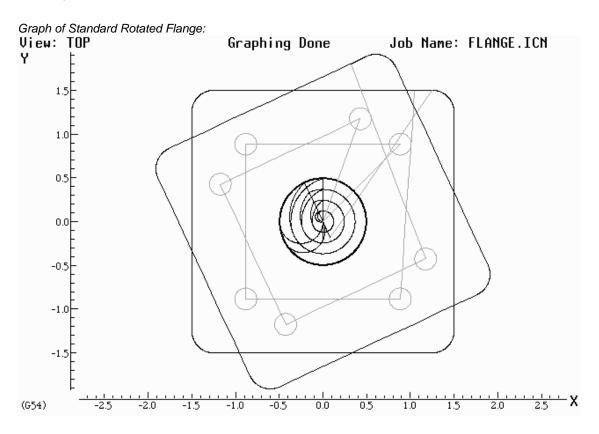

### **Procedure**


To skip the first copy of a part in a Repeat, Mirror or Rotate, insert a "GOTO" before the first copy. The destination of the GOTO must be the Repeat, Rotate or Mirror operation itself. In this example, we insert the GOTO at line 50, as shown below. The rapid at line 40 makes sure that the height offset is posted before the code for the first copy. The GOTO forces a branch around the first copy so that it never executes.

Standard Rotated Flange Program:

Operation .		End		N0050 M & G Codes
# Type	Х	Y	Z	
			GOTO 90; Skip first copy	
0020 Tool #1	0.0000	0.0000	Home	Warning: Any M & G codes
0030 :Make sure offset is posted			entered here will be	
0040 Rapid	0.0000	0.0000	0.1000	unrecognizable by Intercon.
0050 GOTO 90; Skip	first copy			Careful consideration must
0060 Circ Poc	0.0000	0.0000	0.1000	be taken before using this
0070 Drill BHC	0.8839	-0.8839	0.1000	function.
0080 Frame	1.2500	1.5000	0.1000	
0090 Rotate	0.4990	1.8877	0.1000	
0100 End Prog	0.4990	1.8877	Home	

This program produces a part that looks like this:

Graph of Rotated Flange with First Copy Skipped:

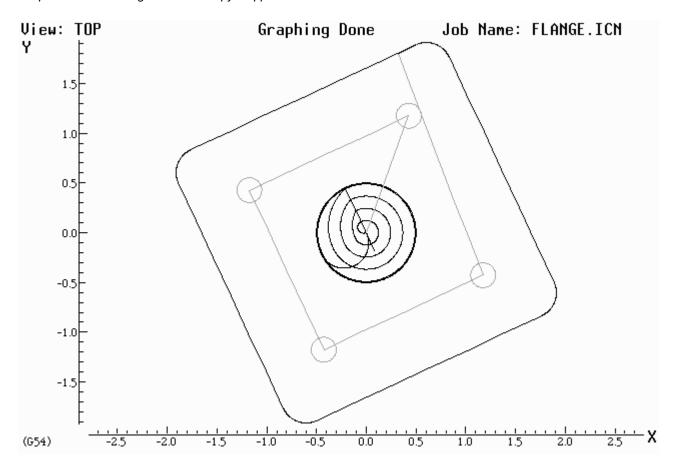

### **Document History**

Rev1 Created on 2003-07-29 by #000